GRAPHIC DOCK

USB 2.0 Docking Station

USER MANUAL

CONTENTS

INTRODUCTION 3
- FEATURES 3
- SYSTEM REQUIREMENTS 3
- PACKAGE CONTENTS 3
- NOTES 3

HARDWARE INSTALLATION 4
SUPPORTED COMMON DISPLAY RESOLUTION 4
INSTALLATION ON WINDOWS 2000/XP/VISTA 5
- DEVICE DRIVER INSTALLATION 5
- VERIFYING DEVICE DRIVER INSTALLATION 9
- DEVICE DRIVER UN-INSTALLATION 10

INSTALLATION ON WINDOWS 7 11
- DEVICE DRIVER INSTALLATION 11
- VERIFYING DEVICE DRIVER INSTALLATION 13
- DEVICE DRIVER UN-INSTALLATION 14

FUNCTION DESCRIPTION 15
- USB TO ETHERNET 15
- USB TO AUDIO 15
- USB TO GRAPHICS/VGA 15
- SUPER UTILITY 15
  - IDENTIFY MONITOR 15
  - MULTI-DISPLAY CONTROL PANEL 16
  - DISPLAY SETTINGS 16
  - FIXED POSITION 16
- DISPLAY MODES 17
  - **"Primary" Mode** 17
  - **"Extended" Mode (Default)** 17
  - **"Mirror" Mode** 17
  - **"OFF" Mode** 18
  - DISPLAY RESOLUTION – Fast Access to Display Resolution Setting 18
  - DISPLAY ROTATION 18

Q&A 19
TROUBLESHOOTING TIPS 20
- Known Issues 20
- General Recommendation 20
- Media Playback 20
- Others 21

REGULATORY COMPLIANCE 22

INTRODUCTION

Congratulations on your purchase of the GRAPHIC DOCK – a USB 2.0 Universal Docking Station. The adoption of USB 2.0 interface allows the GRAPHIC DOCK to virtually work with all Windows-based PC systems. It does not only replicate the common PC Input/Output interfaces, a standard VGA port is also supported. It is ideal for portable PC users with small LCD display as it could support a second display with up to 1920x1200 resolutions. This easy-to-use solution is committed to provide productivity, expandability and connectivity to both home and office environment.

FEATURES

- Support monitor resolution up to WUXGA 1920 x 1200
- Plug-and-Play USB connectivity
- Multi graphics display modes – Primary, Extended, Mirror and Rotation
- USB 2.0 Compliant
- 4 USB 2.0 self-powered ports
- RJ45 10/100Mbps Ethernet
- Standard VGA (DB15) connector to support secondary CRT/LCD monitors
- Stereo audio output (Speaker/Headphone) and monaural audio input (Microphone)

SYSTEM REQUIREMENTS

- Intel/AMD Single core 1.0GHz or higher processor
- 512MB memory or higher (higher memory recommended for optimal performance)
- Available USB 2.0 port
- Windows 2000 SP4 / Windows XP / Windows Vista / Windows 7

PACKAGE CONTENTS

- USB 2.0 GRAPHIC DOCK
- USB 2.0 A to mini B type cable
- AC Power Adapter (DC 3A/5V)
- CD (User Manual, Driver and Utility)
- User Manual

NOTES

- AC power adapter has to be connected to the USB 2.0 GRAPHIC DOCK.
- When the USB 2.0 Hub ports become overloaded, please refresh or re-plug the USB 2.0 GRAPHIC DOCK into the computer to active the ports.
- Do not plug the USB 2.0 GRAPHIC DOCK into your PC or Notebook before executing the set-up or un-installation program.

HARDWARE INSTALLATION

Please do not plug the **USB 2.0 GRAPHIC DOCK** into the computer system before the driver is completely installed.

Follow these steps to quickly install your new **USB 2.0 GRAPHIC DOCK**.

1. Insert the driver CD and follow the instructions.
2. Make sure to restart the computer.
3. Connect the 2nd monitor to the VGA (DB15) connector of **USB 2.0 GRAPHIC DOCK** and switch it on.
4. Connect the AC power adapter (DC 3A/5V)
5. After reboot the PC, plug the **USB 2.0 GRAPHIC DOCK** into an available USB 2.0 port.
6. When finished, you should see the extended display on the 2nd monitors.

SUPPORTED COMMON DISPLAY RESOLUTION

Aspect Ratio	Resolution	VGA
16:10	1920 * 1200	16bit
16:9	1920 * 1080	16bit
16:10	1680 * 1050	16bit, 32bit
16:9	1600 * 900	16bit, 32bit
16:10	1440 * 900	16bit, 32bit
16:10	1280 * 800	16bit, 32bit
15:9	1280 * 768	16bit, 32bit
5:4	1280 * 1024	16bit, 32bit
4:3	1600 * 1200	16bit, 32bit
4:3	1400 * 1050	16bit, 32bit
4:3	1280 * 960	16bit, 32bit
4:3	1152 * 864	16bit, 32bit
4:3	1024 * 768	16bit, 32bit
4:3	800 * 600	16bit, 32bit

INSTALLATION ON WINDOWS 2000/XP/VISTA

DEVICE DRIVER INSTALLATION

Installing the device driver enables your computer's operating system to recognize the docking station and its ports once it's connected. Please check your operating system and refer to the appropriate installation procedure to begin installing the device driver. Please make sure the USB 2.0 GRAPHIC DOCK is **unplugged** from your PC or Notebook before executing the setup program. This section illustrates the simple device driver installation procedure for computer running Windows XP operating system.

Step 1.

Insert the Driver CD into the CD-ROM drive; the setup program should be launched automatically. If setup program does not begin automatically, click **Start→Run**, and double click "**D:\setup.exe**" (where D: is the path of your CD-ROM drive).

Step 2.

Driver Installation Wizard, click "**Next**" to continue.

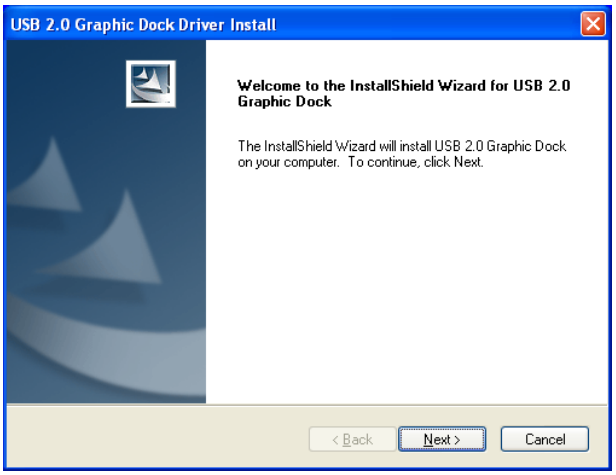
USB 2.0 Graphic Dock Driver Install
Welcome to the InstallShield Wizard for USB 2.0 Graphic Dock
The InstallShield Wizard will install USB 2.0 Graphic Dock on your computer. To continue, click Next.
< Back
Next >
Cancel

Step 3.

License Agreement; please review it and check "**I accept the terms of the license agreement**." Click "**Next**" to accept the License Agreement.

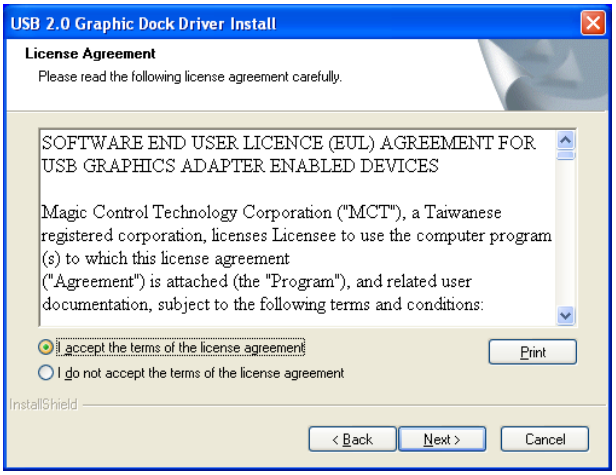
USB 2.0 Graphic Dock Driver Install
License Agreement
Please read the following license agreement carefully.
SOFTWARE END USER LICENCE (EUL) AGREEMENT FOR USB GRAPHICS ADAPTER ENABLED DEVICES
Magic Control Technology Corporation ("MCT"), a Taiwanese registered corporation, licenses Licensee to use the computer program (s) to which this license agreement ("Agreement") is attached (the "Program"), and related user documentation, subject to the following terms and conditions:
I accept the terms of the license agreement
I do not accept the terms of the license agreement
Print
InstallShield
< Back
Next >
Cancel

Step 4.

Setup is searching for installed features…...

**You may notice the screen flashed during hardware installation. It is part of the normal process.*

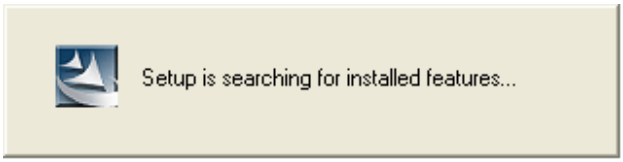

Step 5.

When the Microsoft Hardware Installation warning dialogue boxes, please select" **Continue Anyway**" to continue with the device driver installation.

**This will not affect the device driver installation and device usage.*

Hardware Installation
The software you are installing for this hardware:
USB 2.0 Graphic Dock (Extend).
has not passed Windows Logo testing to verify its compatibility with this version of Windows. (Tell me why this testing is important)
Continuing your installation of this software may impair or destabilize the correct operation of your system either immediately or in the future. Microsoft strongly recommends that you stop this installation now and contact the hardware vendor for software that has passed Windows Logo testing.
Continue Anyway
STOP Installation

Hardware Installation
The software you are installing for this hardware:
USB 2.0 Graphic Dock (Mirror).
has not passed Windows Logo testing to verify its compatibility with this version of Windows. (Tell me why this testing is important)
Continuing your installation of this software may impair or destabilize the correct operation of your system either immediately or in the future. Microsoft strongly recommends that you stop this installation now and contact the hardware vendor for software that has passed Windows Logo testing.
Continue Anyway
STOP Installation

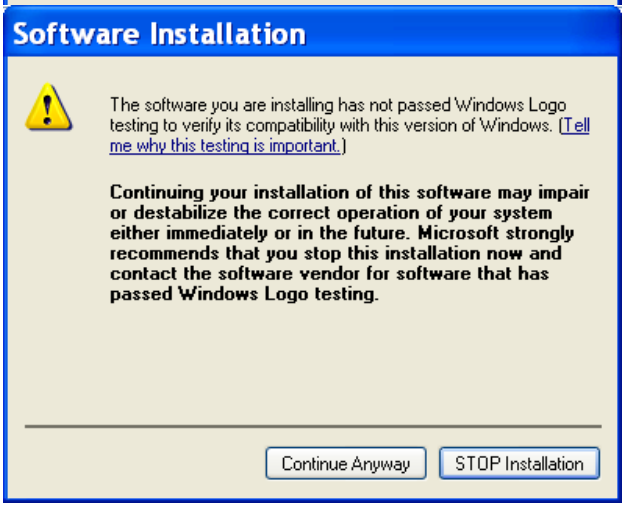
Software Installation
The software you are installing has not passed Windows Logo testing to verify its compatibility with this version of Windows. (Tell me why this testing is important.)
Continuing your installation of this software may impair or destabilize the correct operation of your system either immediately or in the future. Microsoft strongly recommends that you stop this installation now and contact the software vendor for software that has passed Windows Logo testing.
Continue Anyway
STOP Installation

Step 6.

Select "**Yes, I want to restart my computer now**" and click "**Finish**" to reboot.

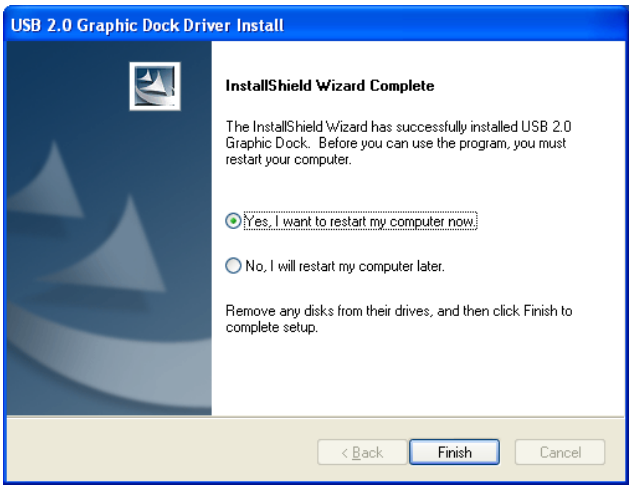
USB 2.0 Graphic Dock Driver Install
InstallShield Wizard Complete
The InstallShield Wizard has successfully installed USB 2.0 Graphic Dock. Before you can use the program, you must restart your computer.
Yes, I want to restart my computer now.
No, I will restart my computer later.
Remove any disks from their drives, and then click Finish to complete setup.
< Back
Finish
Cancel

Step 7. (After system reboot)

Plug the USB 2.0 GRAPHICS DOCK into an available USB 2.0 port of your PC or Notebook. The hardware installation driver will begin automatically. Select "**Install the software automatically**" item and click "**Next**" to continue.

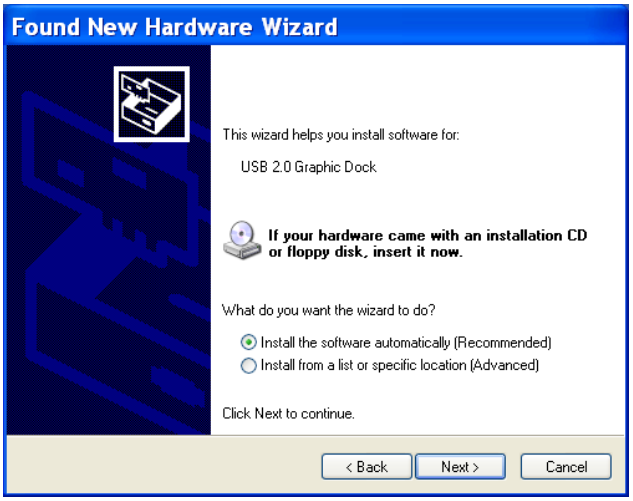
Found New Hardware Wizard
This wizard helps you install software for:
USB 2.0 Graphic Dock
If your hardware came with an installation CD or floppy disk, insert it now.
What do you want the wizard to do?
Install the software automatically (Recommended)
Install from a list or specific location (Advanced)
Click Next to continue.
< Back
Next >
Cancel

Step 8.

When the Microsoft Hardware Installation warning dialogue boxes, please select" **Continue Anyway**" to continue with the device driver installation.

**This will not affect the device driver installation and device usage.*

Hardware Installation
The software you are installing for this hardware:
USB 2.0 Graphic Dock
has not passed Windows Logo testing to verify its compatibility with this version of Windows. (Tell me why this testing is important)
Continuing your installation of this software may impair or destabilize the correct operation of your system either immediately or in the future. Microsoft strongly recommends that you stop this installation now and contact the hardware vendor for software that has passed Windows Logo testing.
Continue Anyway
STOP Installation

Step 9.
Click "**Finish**" to complete the installation.

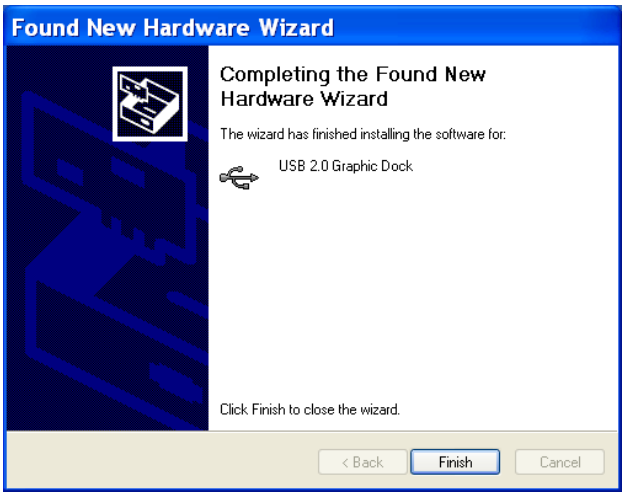
Found New Hardware Wizard
Completing the Found New Hardware Wizard
The wizard has finished installing the software for:
USB 2.0 Graphic Dock
Click Finish to close the wizard.
< Back
Finish
Cancel

Step 10.
After the driver is configured, you will see the icons " " & " " in the lower right taskbar, and the extended display on the 2nd monitor. The USB 2.0 Graphic Dock is ready to use now.

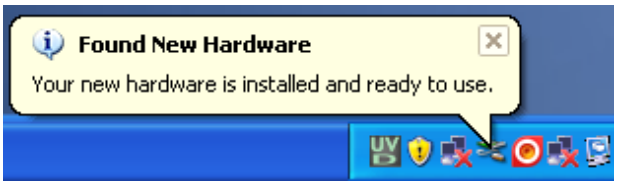

VERIFYING DEVICE DRIVER INSTALLATION

The following procedure allows you to verify the device driver installation.

Please move the cursor to **"My computer"→ "Control Panel" → "System"→ "Hardware"**
→ "Device Manager".

Plug-in the **USB 2.0 Graphic Dock**, then double click **"Display adapters"** , **"Network adapter"**, **"Sound, video and game controllers "** , and **"Universal Serial Bus controllers"**. Begin verification by make sure highlighted devices were added to the system.

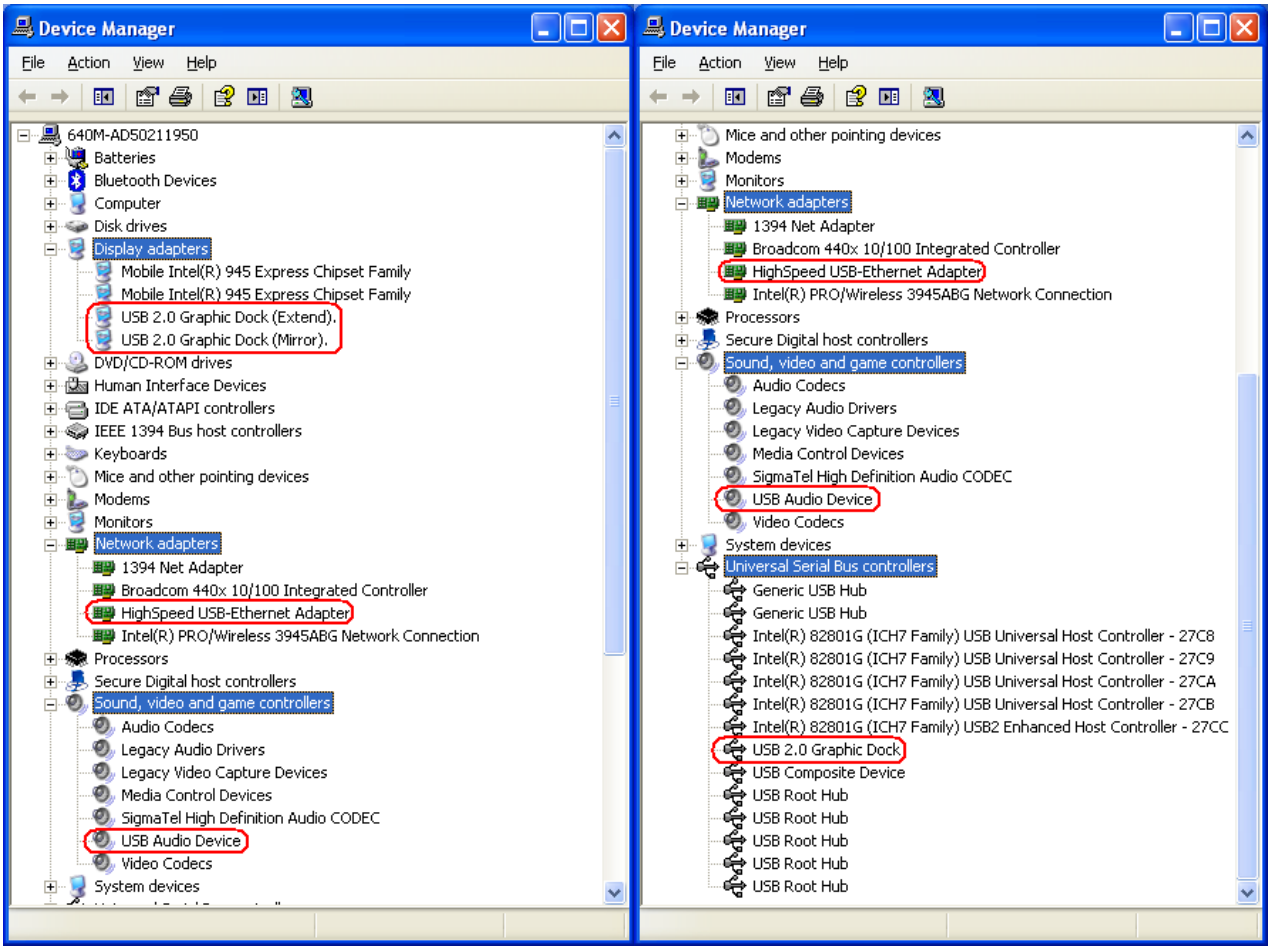

DEVICE DRIVER UN-INSTALLATION

Step 1.

***Start menu**:

Please click "**Start**" → "**Control Panel**"→ "**Add or Remove Programs**".

***Classic start menu:**

Please click "**Start**" → "**Settings**" → "**Control Panel**"→ "**Add or Remove Programs**".

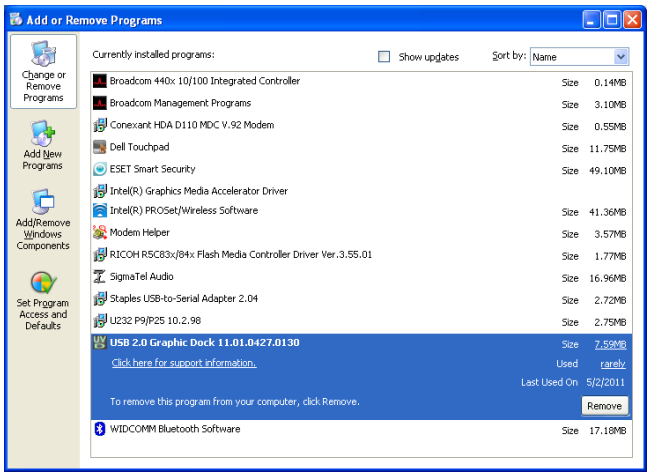

Select "**USB 2.0 GRAPHIC DOCK 11.xx.xxxx.0130 (driver version number)".** Click "**Remove**" button.

Step 2.

Unplug the USB 2.0 Graphic Dock and click "**OK**" to continue.

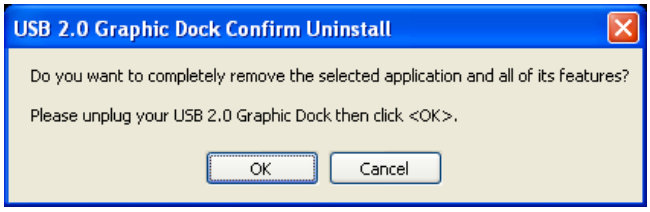
USB 2.0 Graphic Dock Confirm Uninstall
Do you want to completely remove the selected application and all of its features?
Please unplug your USB 2.0 Graphic Dock then click <OK>.
OK
Cancel

Step 3.

Select "***Yes, I want to restart my computer now***" and click "**Finish**" to reboot. After reboot, you will complete the driver un-installation.

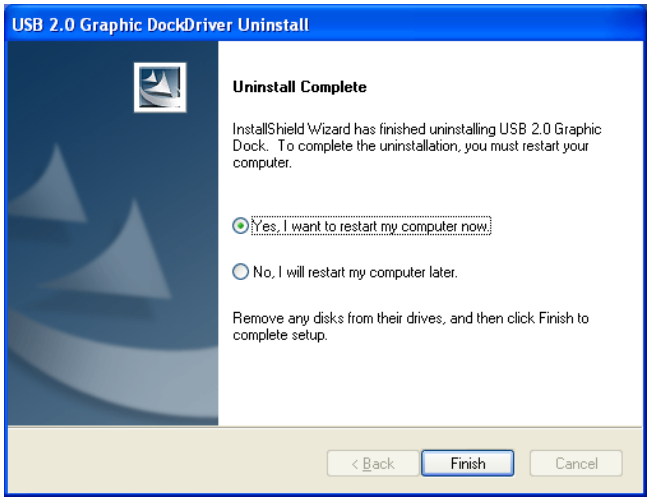
USB 2.0 Graphic DockDriver Uninstall
Uninstall Complete
InstallShield Wizard has finished uninstalling USB 2.0 Graphic Dock. To complete the uninstallation, you must restart your computer.
Yes, I want to restart my computer now.
No, I will restart my computer later.
Remove any disks from their drives, and then click Finish to complete setup.
< Back
Finish
Cancel

INSTALLATION ON WINDOWS 7

DEVICE DRIVER INSTALLATION

Installing the device driver enables your computer's operating system to recognize the docking station and its ports once it's connected. Please check your operating system and refer to the appropriate installation procedure to begin installing the device driver. Please make sure the USB 2.0 GRAPHIC DOCK is **unplugged** from your PC or Notebook before executing the setup program. This section illustrates the simple device driver installation procedure for computer running Windows 7 operating system.

Step 1.

Insert the Driver CD into the CD-ROM drive; the setup program should be launched automatically. If setup program does not begin automatically, click Start, Run, and double click "**D:\Setup.exe**" (where D: is the path of your CD-ROM drive).

Step 2.

Driver Installation Wizard, click "**Next**" to continue.

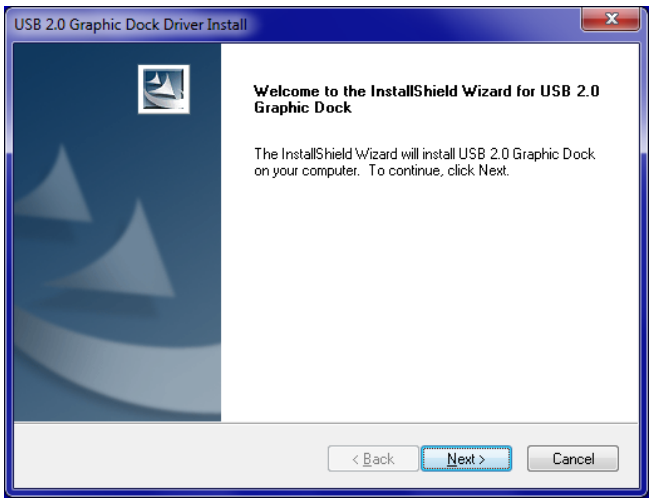
USB 2.0 Graphic Dock Driver Install
Welcome to the InstallShield Wizard for USB 2.0 Graphic Dock
The InstallShield Wizard will install USB 2.0 Graphic Dock on your computer. To continue, click Next.
< Back
Next >
Cancel

Step 3.

License Agreement; please review it and check "***I accept the terms of the license agreement.***" Click "**Next**" to accept the License Agreement.

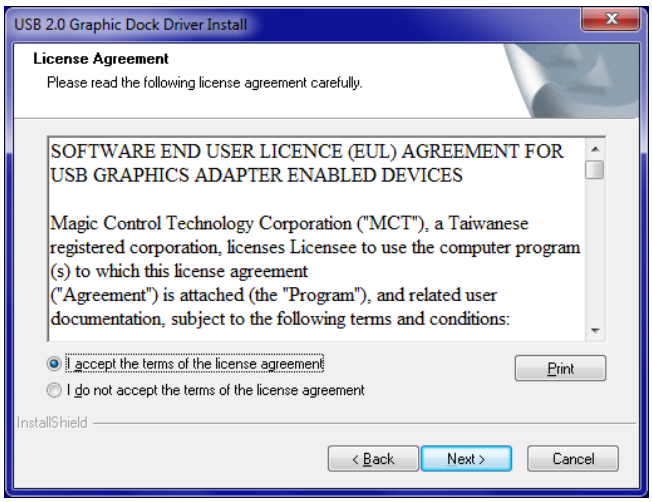
USB 2.0 Graphic Dock Driver Install
License Agreement
Please read the following license agreement carefully.
SOFTWARE END USER LICENCE (EUL) AGREEMENT FOR USB GRAPHICS ADAPTER ENABLED DEVICES
Magic Control Technology Corporation ("MCT"), a Taiwanese registered corporation, licenses Licensee to use the computer program (s) to which this license agreement
("Agreement") is attached (the "Program"), and related user documentation, subject to the following terms and conditions:
I accept the terms of the license agreement
I do not accept the terms of the license agreement
Print
InstallShield
< Back
Next >
Cancel

Step 4.

Setup is searching for installed features…..
**Yyou may notice the screen flashes during the installation. It is part of the normal process.*

Step 5.

Select "***Yes, I want to restart my computer now.***" and click "**Finish**" to reboot the system and to complete the installation.

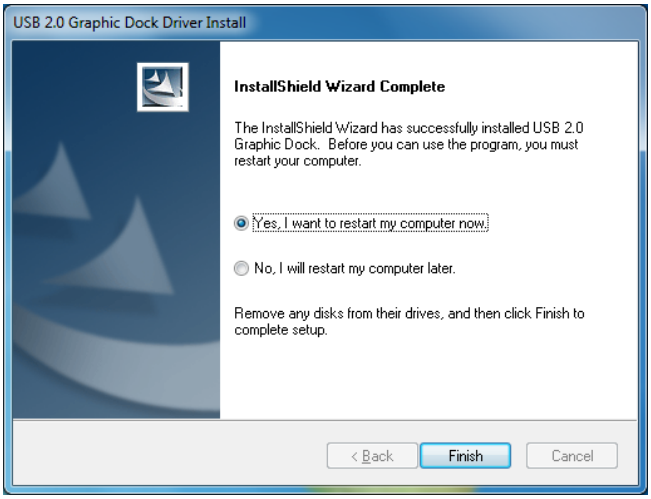
USB 2.0 Graphic Dock Driver Install
InstallShield Wizard Complete
The InstallShield Wizard has successfully installed USB 2.0 Graphic Dock. Before you can use the program, you must restart your computer.
Yes, I want to restart my computer now.
No, I will restart my computer later.
Remove any disks from their drives, and then click Finish to complete setup.
< Back
Finish
Cancel

Step 6. (After system reboot)

Plug the USB 2.0 GRAPHICS DOCK into an available USB 2.0 port of your PC or Notebook. The device driver software setup will begin automatically.
**This may take several minutes for installing device driver. And, you may notice the screen flashes during the installation. It is part of the normal process.*

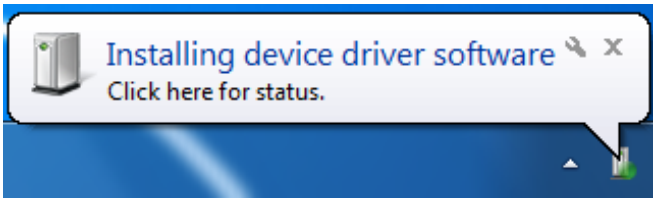

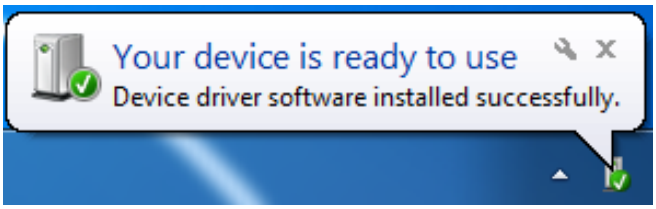

After the driver is configured, you also could click "Show hidden icon" and see an icon in the taskbar, and the extended display on the 2nd monitor. The USB 2.0 Graphic Dock is ready to use now.

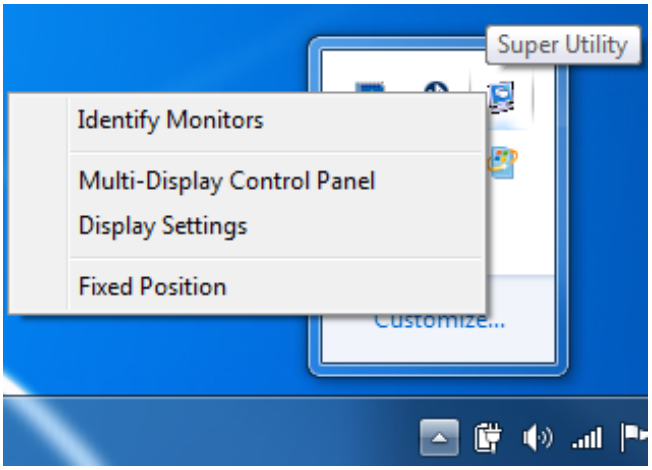

VERIFYING DEVICE DRIVER INSTALLATION

The following procedure allows you to verify the device driver installation.

Please right click **"Computer"→ "Properties" → "Device Manager".**

Plug-in the **USB 2.0 Graphic Dock**, then double click **"Network adapter", "Sound, video and game controllers"**, and **"Universal Serial Bus controllers"**. Begin verification by make sure highlighted devices were added to the system.

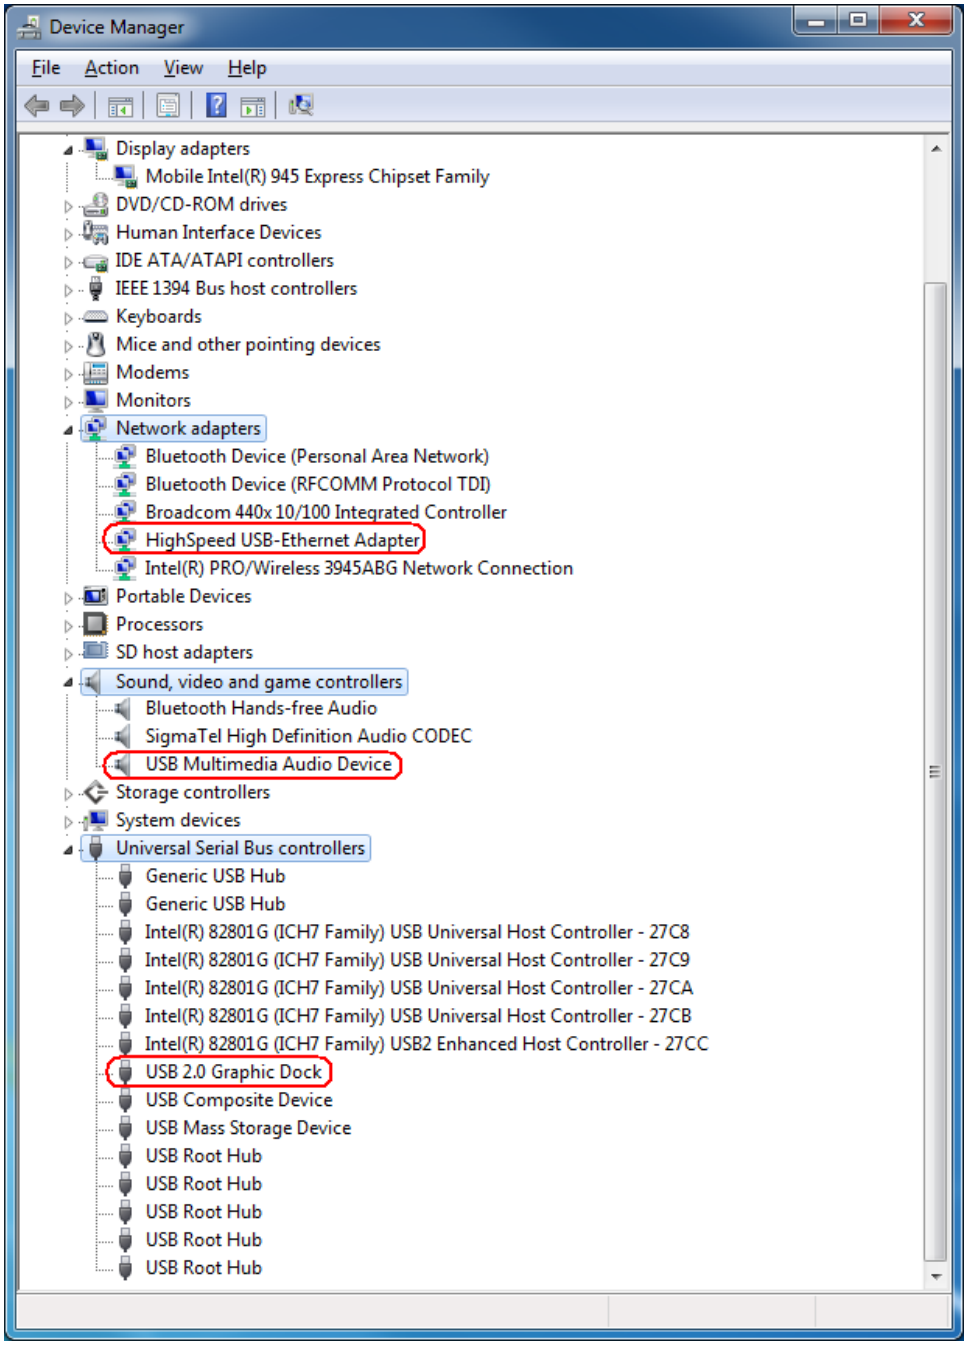
Device Manager
File Action View Help
Display adapters
Mobile Intel(R) 945 Express Chipset Family
DVD/CD-ROM drives
Human Interface Devices
IDE ATA/ATAPI controllers
IEEE 1394 Bus host controllers
Keyboards
Mice and other pointing devices
Modems
Monitors
Network adapters
Bluetooth Device (Personal Area Network)
Bluetooth Device (RFCOMM Protocol TDI)
Broadcom 440x 10/100 Integrated Controller
HighSpeed USB-Ethernet Adapter
Intel(R) PRO/Wireless 3945ABG Network Connection
Portable Devices
Processors
SD host adapters
Sound, video and game controllers
Bluetooth Hands-free Audio
SigmaTel High Definition Audio CODEC
USB Multimedia Audio Device
Storage controllers
System devices
Universal Serial Bus controllers
Generic USB Hub
Generic USB Hub
Intel(R) 82801G (ICH7 Family) USB Universal Host Controller - 27C8
Intel(R) 82801G (ICH7 Family) USB Universal Host Controller - 27C9
Intel(R) 82801G (ICH7 Family) USB Universal Host Controller - 27CA
Intel(R) 82801G (ICH7 Family) USB Universal Host Controller - 27CB
Intel(R) 82801G (ICH7 Family) USB2 Enhanced Host Controller - 27CC
USB 2.0 Graphic Dock
USB Composite Device
USB Mass Storage Device
USB Root Hub
USB Root Hub
USB Root Hub
USB Root Hub
USB Root Hub

DEVICE DRIVER UN-INSTALLATION

Step 1.

Please click "**Start**" → "**Control Panel**""→ "**Programs**" → "**Uninstall a program**".

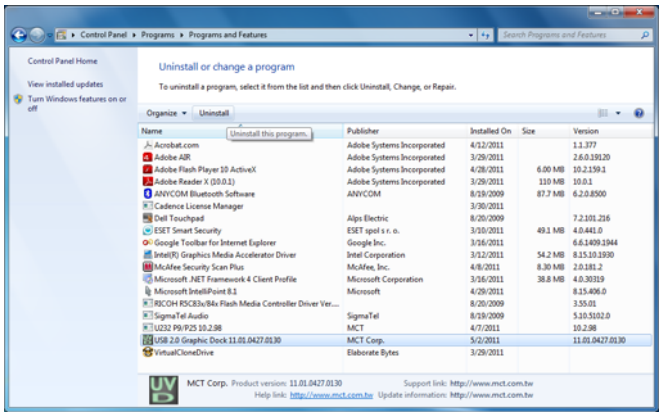

Select "**USB 2.0 GRAPHIC DOCK 11.xx.xxx.0130 (driver version number)**". Click "**Uninstall**" button.

Step 2.

Unplug the USB 2.0 Graphic Dock and click "**OK**" to continue.

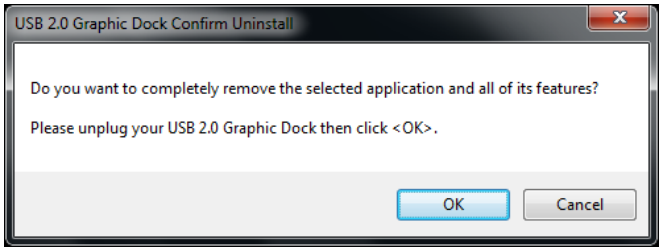
USB 2.0 Graphic Dock Confirm Uninstall
Do you want to completely remove the selected application and all of its features?
Please unplug your USB 2.0 Graphic Dock then click <OK>.
OK
Cancel

Step 3.

Select "***Yes, I want to restart my computer now***" and click "**Finish**" to reboot. After reboot, you will complete the driver un-installation.

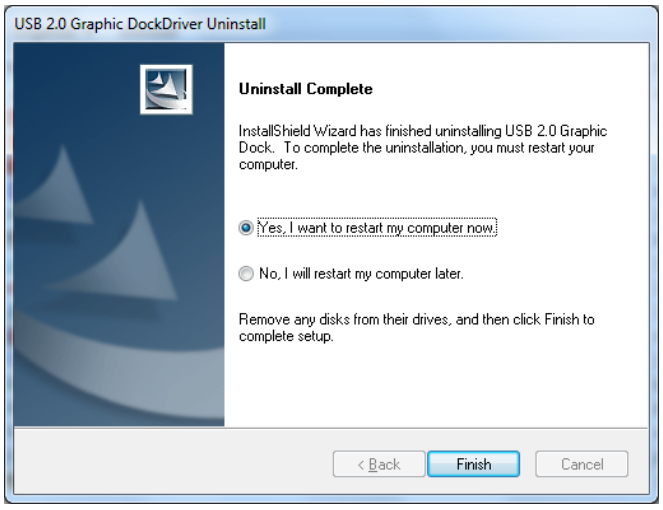
USB 2.0 Graphic DockDriver Uninstall
Uninstall Complete
InstallShield Wizard has finished uninstalling USB 2.0 Graphic Dock. To complete the uninstallation, you must restart your computer.
Yes, I want to restart my computer now.
No, I will restart my computer later.
Remove any disks from their drives, and then click Finish to complete setup.
< Back
Finish
Cancel

FUNCTION DESCRIPTION

This section describes the main functions provided by the USB 2.0 GRAPHICDOCK.

USB TO ETHERNET

It can support the 10/100Mbps LAN transfer, and it is compliant IEEE802.3u 100BASE-TX and IEEE802.3 10BASE-T.

USB TO AUDIO

It can support one Microphone input and one Stereo Speaker output. An external microphone device can be connected to record the voice, and connect to the Speaker to output the voice or music.

USB TO GRAPHICS/VGA

It can support the LCD or CRT monitor; it can attach the D-SUB interface LCD or CRT monitor and it supports 3 kinds of selections, Primary, Extended and Mirror. Make sure the USB GRAPHIC DOCK is attached to the PC/Notebook. Look for the icon & at the lower right toolbar on Windows 2000/XP/Vista or the icon on Windows 7. Right-click these two icons to access the variety of functions associated to the device.

SUPER UTILITY

- **IDENTIFY MONITOR**

Easy display identification via a serial number will be showed on the upper right corner of all attached display devices.

➢ MULTI-DISPLAY CONTROL PANEL

An unique feature to allow much quicker and simpler working experience under multi-display environment. A series of hotkey to quickly move active window or cursor to the desired display device (either on-board or each USB Display enabled devices).

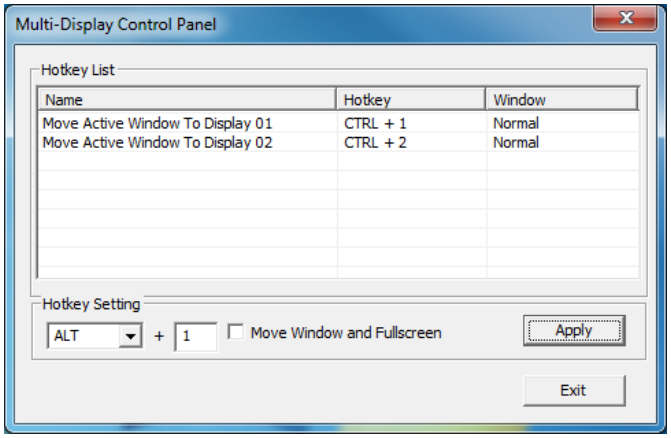

The default setting of hotkeys can be found on the Hotkey List of "Multi-Display Control Panel".

For example: Ctrl +2 means: to move the window to the Display 2.

➢ DISPLAY SETTINGS

Fast access to the system "Display Settings".

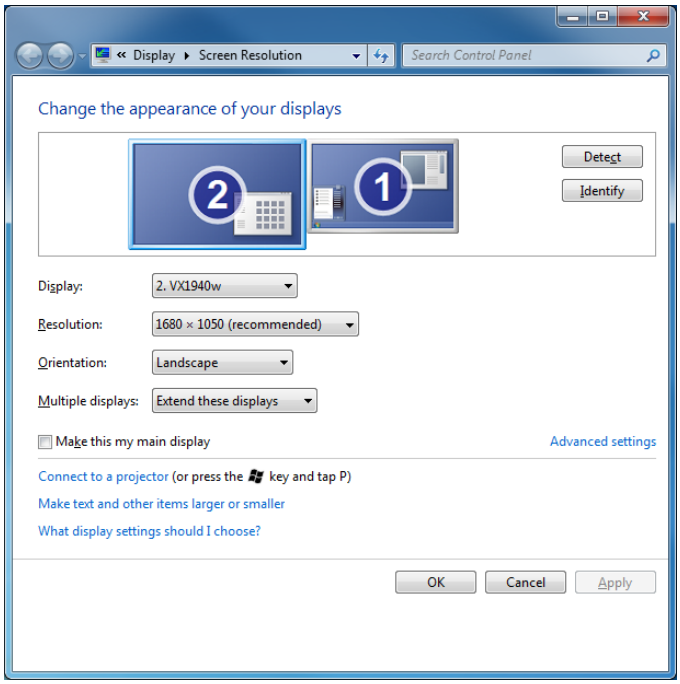

➢ FIXED POSITION

It remains the prior setting of display location after restart the computer.

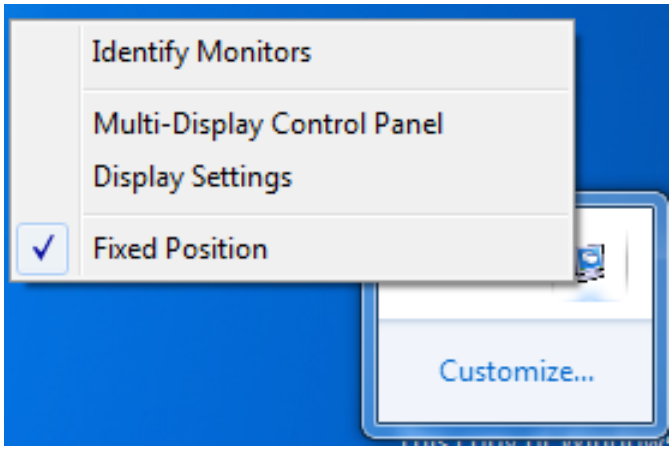

DISPLAY MODES

"Primary" Mode

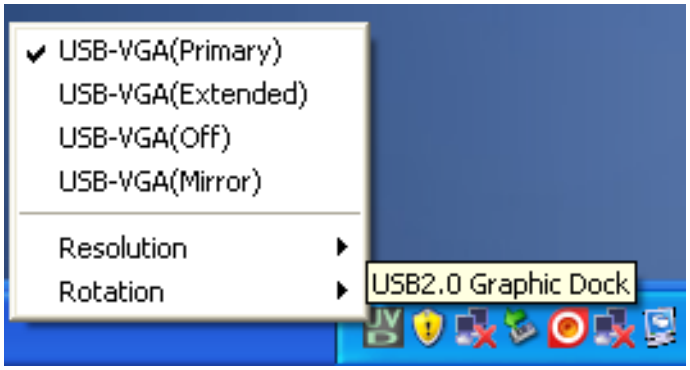

The system's main graphics adapter will automatically switch to act as the secondary graphics adapter and the main screen will now work as the extended desktop. The monitor connected to the USB 2.0 GRAPHIC DOCK will now act as the primary Windows desktop.

*Please be advised that some display utility and drivers that shipped with certain AGP and built-in display adapters may prevent this option from working on some systems. You can disable the other utility program (usually found in the same toolbar located on the bottom right hand corner) to make this function work properly.

"Extended" Mode (Default)

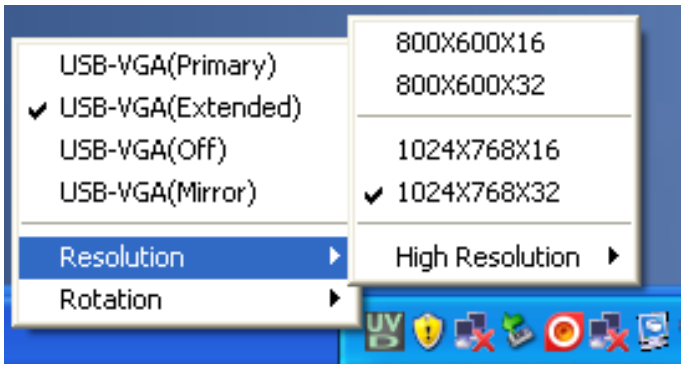

By default, the monitor connected to USB 2.0 GRAPHIC DOCK will work as, "Extended Desktop" which extends the primary Windows desktop of your system. You can change the relative position of this extended desktop under the Display Properties.

"Mirror" Mode

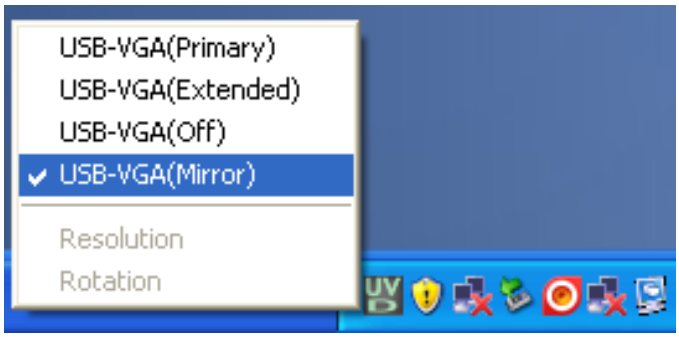

By setting this mode, the Windows desktop will be mirrored / replicated to the secondary CRT/LCD monitor. The screen resolution setting on the secondary monitor will follow the primary screen's resolution. For example, if the primary resolution is 1024x768x32bit, and the secondary monitor's resolution will be the same. But if the selected resolution setting is not supported by the primary screen, a warning dialogue box will be displayed and the suggested screen resolution will be shown.

"OFF" Mode

This option disables the USB 2.0 GRAPHIC DOCK on the system.

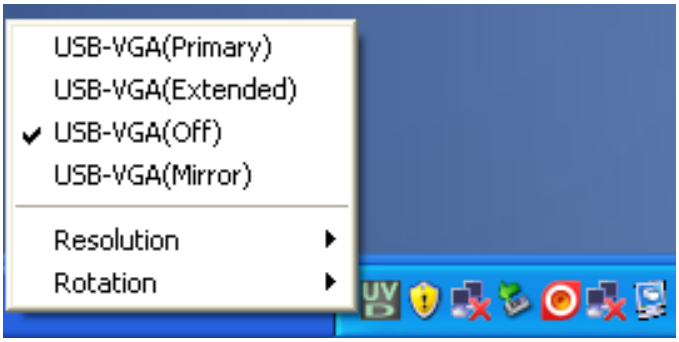

DISPLAY RESOLUTION – Fast Access to Display Resolution Setting

The default setting resolution is:
1024 * 768 * 32bit.

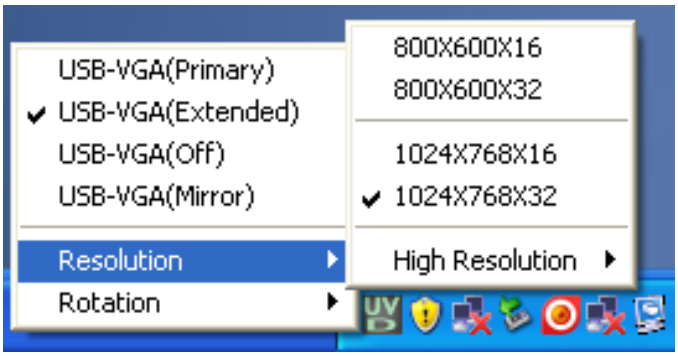

DISPLAY ROTATION

Four options available: "0°, 90°, 180°, 270° under the Extended or Primary display modes. It is a useful function for some rotatable display device.

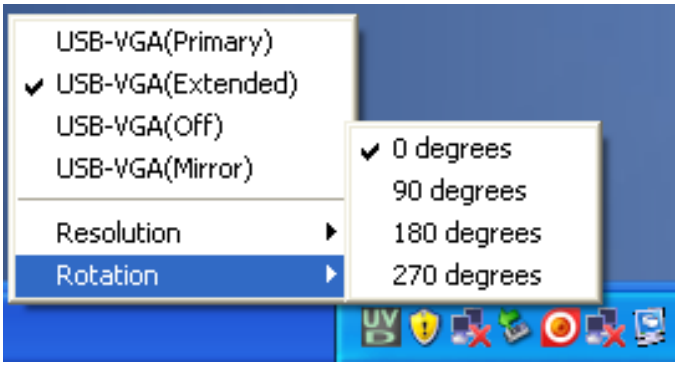

Q&A

This section describes the common Q&A regarding to the installation or operation of the USB 2.0 GRAPHIC DOCK.

Q: Why can't I make the USB 2.0 GRAPHIC DOCK the primary display?

A: Some video cards ship their product with a utility that prevent other video cards from being set as the primary card. Check the bottom right hand corner taskbar for the utility. Disable the utility before switching our adapter to be the primary display.

Q: Why won't my DVD player work when I move it over to the extended display?

A: Some DVD playback software packages do not support playing on a second display adapter of any kind. You may try to open the program in the secondary display first before playing the DVD.

Q: How come my video will not play on Media Player if I move it over to the extended desktop?

A: Check that you have moved the Media Player window completely over to the second screen.

Q: Why does my mouse not move pass the right side of the screen as it should on extended desktop?

A: Check the display settings and make sure that your display number '2' is on the right side of display number '1'. You can rearrange how Windows treats each display in relation to each other in the Display Properties Settings.

Q: There are lines running horizontally up and down my screen.

A: This is due to a low refresh rate setting. You can change this in the Display Properties Settings Advanced Monitor. Make sure you select the USB 2.0 GRAPHIC DOCK first and not set the refresh rate higher than what your monitor can support. This may damage your monitor. You can also try to reset/refresh/resynchronize your monitor.

Q: Direct3D does not work?

A: This is a current limitation of the Graphic Dock. Please check for driver updates in the future to add support for this. If your application requires this, please use the main display device.

TROUBLESHOOTING TIPS

This section describes the general troubleshooting tips regarding to the installation or operation of the USB DISPLAY DEVICE.

Known Issues

- Please set the Aero desktop theme to play the DVD on Windows 7.
- Direct 3D is not supported on Windows XP/Vista. It supported on Windows 7 Aero mode.

General Recommendation

- Check to make sure that the device is plugged in correctly to the host system.
- Make sure that the USB port that you are using is USB 2.0.
- Unplug the USB cable of USB graphics device and re-insert it.
- Check to see that the monitor is connected correctly and is powered ON.
- Make sure to restart your computer after the driver installation.
- Try a different USB 2.0 port and/or computer.
- Unplug all other USB devices from the system.
- Try connecting the USB cable of USB graphics device directly to the computer instead of through a hub.
- Reset/refresh/resynchronize your monitor.

Media Playback

- During video playback on all platforms, please do not change the display mode, position or arrangement of video player window (such as dragging the video player window between main display and attached display). This usually causes the video player to have strange behavior and the video may stop playing. We suggest stopping the video playback, moving the window to the USB graphics device attached display and then selecting the video clip to start playing.
- You may experience poor video performance on USB graphics device attached display under some low-spec PC system.
- Video rendering using hardware overlays is supported.
- Some DVD playback software packages do not support playing on a second display adapter of any kind. You may try to open the media player in the secondary display first before start

playing the DVD.

- Your PC may be lack of certain video codec to support playback of certain video format. Please use the link below to install license free media codec.

K- Lite: http://www.free-codecs.com/download/K_Lite_Codec_Pack.htm

- Video/Media players have different decoding capability under different display modes. For better performance on watching DVD or certain video format on the USB graphics device attached display, it is recommended to use the following license free software.

VLC Media Player: http://www.videolan.org/vlc/

Media Player Classic: http://sourceforge.net/projects/guliverkli/

Others

- Some graphics card, i.e. Intel, prevents other secondary graphics chipset from being set as the primary card. As the result of this, *primary mode* might not work or the display maybe disabled.
- If you have problems during the boot up process, start your computer in Safe Mode and uninstall the driver. Hold the CTRL key until the Windows startup menu appears and select Safe Mode.
- To verify the driver version that you installed, please click "Control Panel" → "Add or Remove Programs" to check the program: USB Graphic Dock 11.xx.xxxx.0130 (the number means the driver version).
- Please contact your dealer to obtain the latest driver or for additional assistance if needed.
- Some limitation exists in different media player on file format support. We enclose our compliance test result in the tables according to different operating system, main system graphics card/chipset, media players, and the supported media format. It will be updated periodically with new version of media players or our latest driver.

REGULATORY COMPLIANCE

FCC
This equipment has been tested and found to comply with Part 15 of the FCC rules. Operation is subject to the following two conditions:
• This device may not cause harmful interference
• This device must accept any interference received, including interference that may cause undesired operation.

CE
This equipment is in compliance with the requirements of the following regulations:
EN 55022: CLASS B (2006),
IEC/EN 61000-3-2 (2006), IEC/EN 61000-3-3 (1995+A1:2001+A2:2005)
EN 55024 (1998+A1 :2001+A2 :2003), (IEC/EN 61000-4-2 (1995+A1:1998+A2:2001)
/-3 (2006)/-4 (2004)/-5 (2006)/-6 (1996+A1:2001)/-11 (2004))

C-Tick
This equipment is in compliance with the requirements of the following regulations:
EN 55022: CLASS B (2006), AS/NZS CISPR22 © IEC: 2005.

VCCI
This equipment is in compliance with the requirements of the following regulations:
CISPR 22 © IEC: 2005.

Disclaimer
Information in this document is subject to change without notice. The manufacturer does not make any representations or warranties (implied or otherwise) regarding the accuracy and completeness of this document and shall in no event be liable for any loss of profit or any commercial damage, including but not limited to special, incidental, consequential, or other damage. No part of this document may be reproduced or transmitted in any form by any means, electronic or mechanical, including photocopying, recording or information recording and retrieval systems without the express written permission of the manufacturer.

Copyright© 2011 Magic Control Technology Corp. All rights reserved. All trade names are registered trademarks of their respective owners. Features and specifications are subject to change without notice. Product may not be exactly as shown in the diagrams.